

## INSTALLATION FOR FLUSH MOUNT CMM316D-251BNPS3D / CMM316D-251BNPS4D



**SAVE THESE INSTRUCTIONS - READ ALL INSTRUCTIONS CAREFULLY**

### WARNING



**CAN ICES-005 (B) / NMB-005 (B)**

### PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.

- To prevent personal injury or product damage only licensed electricians/personnel should install fixture.
- To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- This product must be installed in accordance with the National Electric Code (NEC) and all applicable Federal, State/Provincial and Local Electric Codes and Safety Standards.
- Disconnect fixture and allow cooling prior to servicing.
- Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.
- To prevent product malfunction and/or electrical shock this product must be properly grounded.
- All parts must be used as indicated in the instructions. Do not substitute any parts, leave parts out, or use any parts that are worn, damaged or broken.
- **NOTE:** This fixture is rated for a 120V circuit. Using appropriate meter equipment, it is the responsibility of the installer to identify the hot and neutral wires of the power circuit before installation.

## ASSEMBLY AND INSTALLATION

### 1. DISCONNECT POWER.

2. Remove the three DECORATIVE NUTS (13) from the METAL RING (12). Remove the METAL RING (12) and LENS (11) from the FIXTURE PAN (9).

3. Pull the SUPPLY WIRES (4) & (6) and HOUSE GROUND WIRE (2) out from the OUTLET BOX (1).

4. **POWER LEAD WIRE CONNECTIONS:** Connect the HOUSE GROUND WIRE (2) to the FIXTURE GROUND WIRE (3) using WIRE CONNECTOR (7); Connect the WHITE SUPPLY WIRE (4) to the WHITE FIXTURE WIRE (5) and connect the BLACK SUPPLY WIRE (6) to the BLACK FIXTURE WIRE (8) using WIRE CONNECTORS (7).

5. Thread one of the FIXTURE SCREWS (10) into the threaded hole on the OUTLET BOX (1). Carefully tuck all wires back into the OUTLET BOX (1).

6. Locate the FIXTURE PAN (9) over the OUTLET BOX (1), positioning the FIXTURE SCREW (10) through the large opening of the keyhole slot and then twist to the narrow opening of the keyhole slot. Put the other FIXTURE SCREW (10) through the long slot on the FIXTURE PAN (9) and thread it into the OUTLET BOX (1). Then secure the FIXTURE PAN (9) to the OUTLET BOX (1) by tightening the two FIXTURE SCREWS (10).

7. Place the ACRYLIC LENS (11) over the FIXTURE PAN (9). Place the METAL RING (12) over the ACRYLIC LENS (11) lining up the holes of the FIXTURE PAN (9) posts and securing it with the three DECORATIVE NUTS (13).

8. RESTORE POWER.

9. INSTALLATION IS COMPLETE

