



SAVE THESE INSTRUCTIONS - READ ALL INSTRUCTIONS CAREFULLY

⚠ WARNING

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- For indoor use only.
- Do not let the power cords touch hot surfaces.
- Do not install near gas or electric heaters.
- Use caution when servicing batteries. Battery acid can cause burns the skin and the eyes. If acid comes in contact with the skin or eyes, rinse affected area with fresh water and contact a physician immediately.
- Equipment should be mounted in locations and at heights where unauthorized personnel will not readily subject it to tampering.
- The use of accessory equipment is not recommended by the manufacturer, it may cause an unsafe condition, and will void the unit's warranty
- Do not use this equipment other than intended purpose.
- Servicing of this equipment should be performed by a qualified service technician.

Installation Instructions HARDWIRED INSTALLATION

1.1 Extend un-switched 20 hour AC supply of rated voltage to a junction box (supplied by others) installed in accordance with all applicable codes and standards. Leave a minimum of 8 inches of slack on the wire. This circuit should NOT be energized/live at this time.

1.2 Open the unit by unscrewing the cover screws on the sides of the unit. The front cover can then be removed.

1.3 Unit is supplied with universal spider knockouts and keyhole slots stamped into the back of the cabinet. Knock out the appropriate hole(s) and bring wires through the hole(s) into the cabinet.

1.4 Mount the unit securely into place. Do not rely on the electrical box as the only support for the unit. See 5.1.2 Line Cord Installation shown above for further details.

1.5 Make proper wiring connections between the AC supply and the unit's transformer:
White-Line:AC 120V-Blue-Line AC347 Volts: Green - Line Earth: (Ref.3).

INSULATE UNUSED WIRE! Connect the ground to supplied green ground wire in accordance with local codes. Reassemble all wire connections and connectors. CAUTION! Failure to insulate unused wire may result in a shock hazard or unsafe condition as well as equipment failure.

1.6 es on larger units may be shipped separately to avoid damage in shipping. Install batteries into inet and complete the appropriate battery connections (Ref.2).

1.7 es already installed in the cabinet must be connected to the circuit board (Ref. 2, 3).

1.8 Secure all internal wires.

1.9 Replace the cover and secure the cover screws.

1.10 Turn on AC the power supply.

1.11 If the unit is supplied with a line cord, connect the line cord plug into the appropriate receptacle previously installed.

1.12 is complete with lamp heads, position the lamp heads to provide best lighting distribution by loosening head set screws to adjust angle and swivel. Manually rotate or turn head(s) to the desired position, then tighten set screws to lock position.


OPERATION

1. To Test, depress the TEST Switch. Charge indicator will go out and the DC lamps will come on.
2. Release the TEST Switch. DC lamps will be extinguished, and the charge indicator will come on.
3. A bright charge LED indicator light indicates a high charge rate. After the battery has reached full charge, the indicator light will go out. Under normal operation the high charge indicator will turn on and off intermittently while the unit is in standby mode (regular AC is present) since the charge rate will vary in order to maintain an optimal battery performance.




CIRCUITRY

120V AC 50/60 Hz	Input wattage: 8W	Working voltage: AC120V; 347V AC 50/60 Hz
	Input current: 0.052 A	Recharge time: 24 h
	Efficiency: 0.85 PF	Output wattage: 2W x 2 PCS : Max: 72W Color temperature: 6500K - 7500K
347V AC 50/60 Hz	Input wattage: 10W	Light Source: Ultra Bright LED
	Input current: 0.040 A	Emergency duration: > 30 min (72W)
	Efficiency: 0.83 PF	Lead-acid battery: 12V / 7Ah

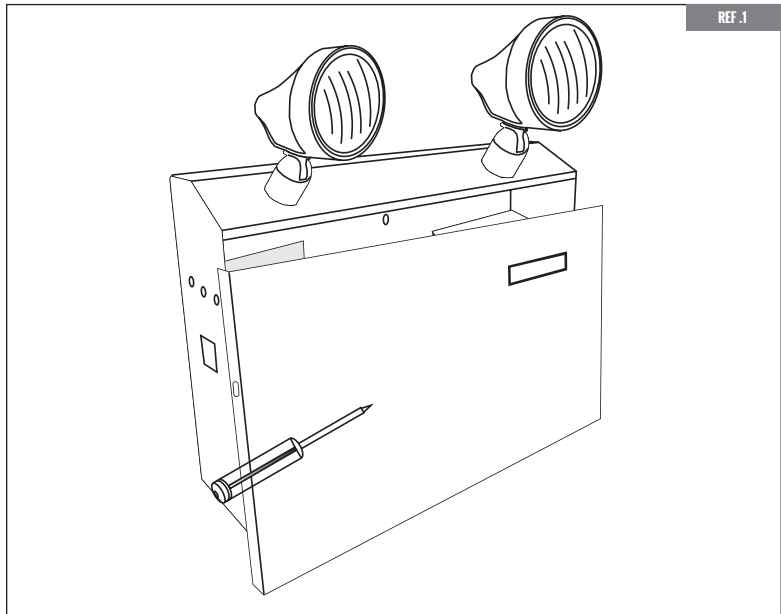

REF. 1






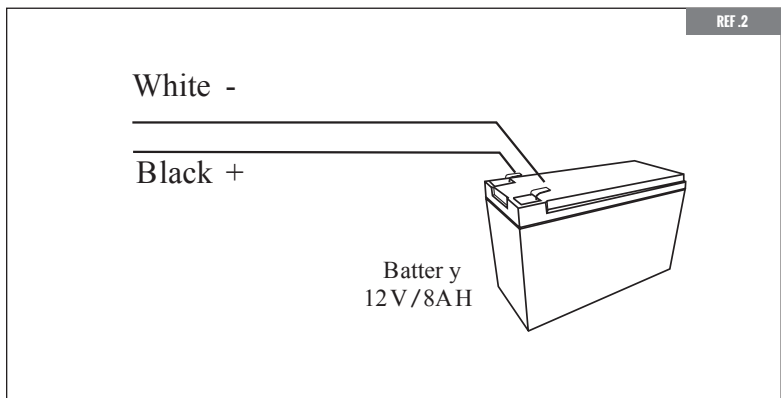


REF. 2



INSTALLION - ER370D-WHM-A13-BB-4RC LED METAL EMERGENCY BATTERY UNIT WITH DUAL HEADS

SAVE THESE INSTRUCTIONS - READ ALL INSTRUCTIONS CAREFULLY

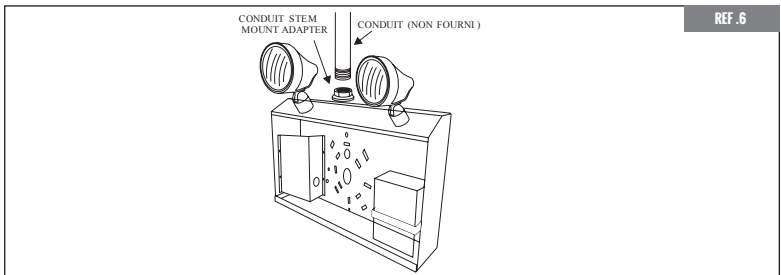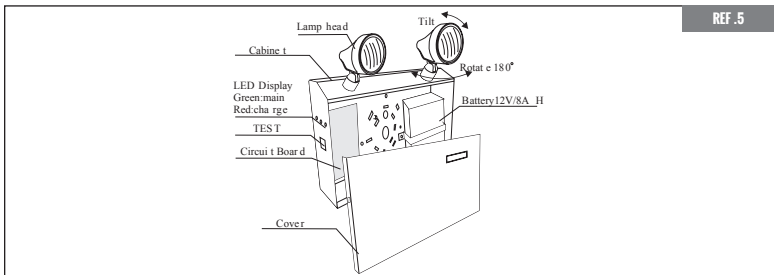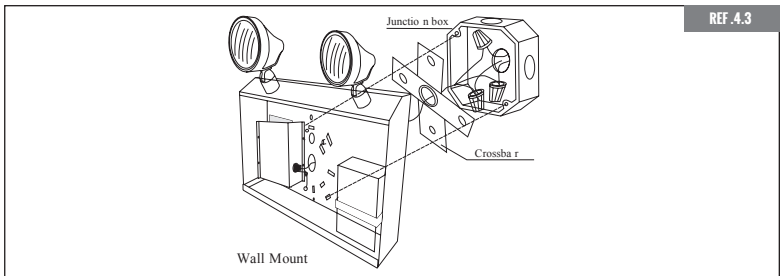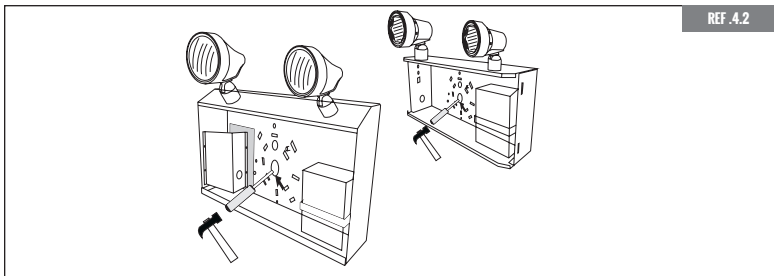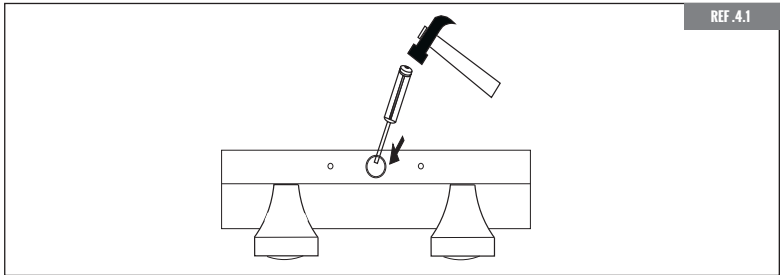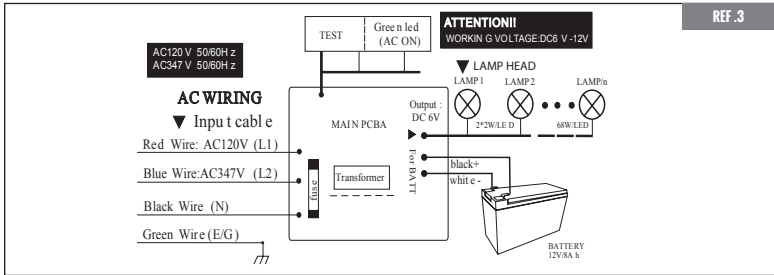

MAINTENANCE

1. Code requires that the equipment be tested every 30 days for 30 seconds, and that written records be maintained for all test results and repairs. Further, the equipment is to be tested once a year for the required duration as per Code. The battery is to be replaced or the equipment repaired whenever the equipment fails to operate as intended during the duration test. The manufacturer strongly recommends compliance with all Code requirements.

2. Clean lenses on a regular basis to provide maximum light distribution in case of an emergency.

NOTE: The servicing of any parts should be performed solely by a qualified service technician. The use of replacement parts not furnished by the manufacturer may cause equipment failure and will void the warranty.

TROUBLESHOOTING - THE EMERGENCY HEADLIGHT DO NOT TURN ON AT ALL

1. Check AC supply - be sure unit has 30 hour AC supply (un-switched).
2. AC supply is OK, and indicator light is out, replace PC Board Assembly. Pilot Light is on before test.
3. Either the output is shorted or overloaded, or the battery is not connected.
4. Battery is severely discharged. Allow 30 hours for recharge and then retest. **NOTE:** This could be the result of a switched AC supply to the unit (which has been turned off at some point), a battery with a shorted cell, an old battery or a battery which has been discharged due to a long power outage and is not yet fully recharged.

! CAUTION: This equipment is furnished with a sophisticated low voltage battery dropout circuit to protect the battery from over discharge after the useful output has been used. Allow 20 hours recharge time after installation or power failure for full-load testing or usage.

THE EMERGENCY HEADLIGHTS COMES ON DIM WHEN THE TEST BUTTON IS PRESSED

Battery discharged - permit unit to charge for 30 hours and then retest. If lamps are still dim, check charger for proper function. If charger functions correctly, replace battery.

THE EMERGENCY HEADLIGHTS COMES ON WHEN THE BATTERY IS FIRST CONNECTED

Battery may be connected in reverse polarity. Check connections. Connect Positive lead to Positive battery terminal and Negative lead to Negative battery terminal. The lamps should then turn off and the charge indicator should light when AC power is applied. (Ref.3)

THE EMERGENCY HEADLIGHTS COMES ON DIM WHEN THE POWER IS ON

Check supply voltage and AC connections. This emergency light is provided with brownout protection. The AC supply must be at least 80% of nominal (120V on a 347V line) for equipment to function normally. At lower voltages the emergency lamps will begin to glow dimly until the source voltage drops below the full turn-on point. **NOTE:** This condition may also be caused by incorrectly connecting a 120 Volt supply line to the 347-Volt transformer lead.

NOTHING HAPPEN WHEN THE UNIT IS ENERGIZED.

Some models have a standard time delay built into the design of the charger board. Please allow 15 minutes with AC current connected. At this point the LED AC-ON and CHARGE lights should illuminate.