

INSTALLATION FOR RTBP514P-M, RTBP522P-M AND RTBP524P-M

SAVE THESE INSTRUCTIONS - READ ALL INSTRUCTIONS CAREFULLY

WARNING




CAN ICES-005 (B) NMB-005 (B)

PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.

- Luminaire must be installed and serviced by a qualified electrician.
- This product must be installed in accordance to local and national electrical codes.
- For safe operation, please ensure luminaire is installed to the correct voltage, in accordance to these instructions.
- Please ensure that power is off at panel prior to installation or servicing. For servicing, please allow luminaire to cool prior to any maintenance.
- Do not install panel in an unstable ceiling, or near combustible materials.
- Do not modify the luminaire or change any components.
- Do not use luminaire under direct sunlight, high humidity, fog, rain, corrosive gas, dust or moisture.

WIRE DIAGRAM

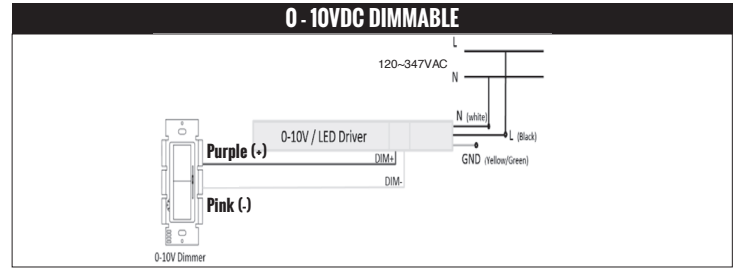


DIP SWITCH SETTINGS - COLOR TEMPERATURE AND WATTAGE




There are 2 switches on the side of the Junction Box to control both wattage level and color temperature - these must be set prior to installation.

DEFAULT SETTINGS AS FOLLOWS:
 RTBP514P-M40WC0-WH - 4000K / 40W
 RTBP522P-M40WC0-WH - 4000K / 40W
 RTBP524P-M50WC0-WH - 4000K / 50W


RECESSED INSTALLATION

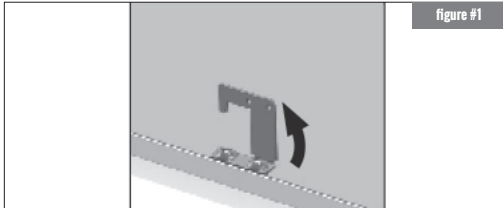

1. Bend all earthquake clips to vertical position.

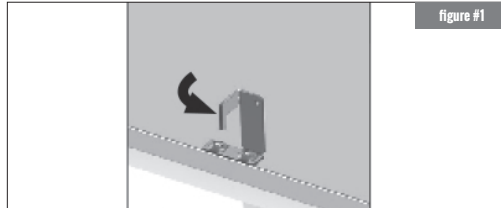


2. Bend support clip outward to sit securely on T-Bar frame.

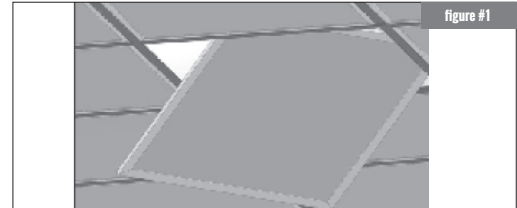


3. Place fixture on T-Bar support frame and ensure proper fit.


DRYWALL KIT INSTALLATION

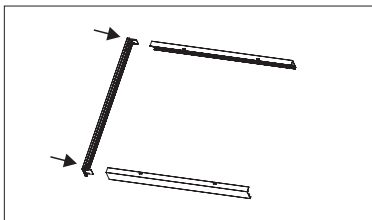


1. Connect the three pieces of the frame with the metal bracket.

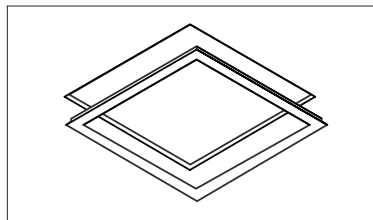

2. Fix the frame to the ceiling hole.

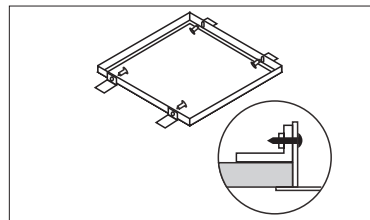

3. Fix the frame to the ceiling with the screws and "L" accessory.

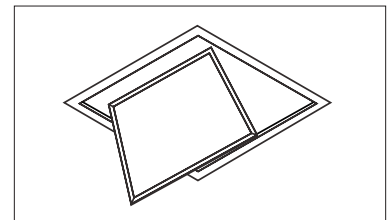


4. Place the panel into the frame.

INSTALLATION FOR RTBP514P-M, RTBP522P-M AND RTBP524P-M


SAVE THESE INSTRUCTIONS - READ ALL INSTRUCTIONS CAREFULLY



SUSPENSION MOUNT INSTALLATION

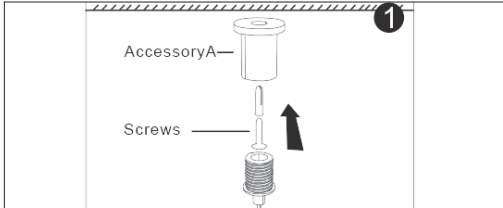

1. Screwing accessories A in ceiling.

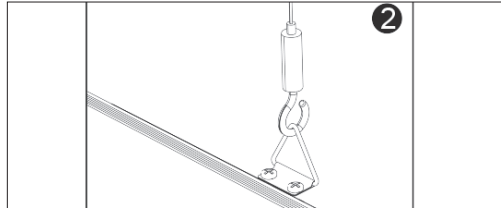


2. Triangle rings for hooks




3. Finished Installation.


SURFACE MOUNT INSTALLATION

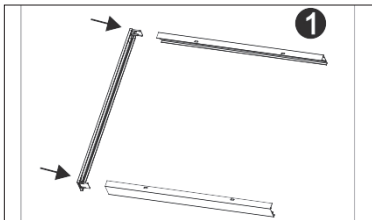


1. Assemble the 3 pieces of frame by plastic bracket.

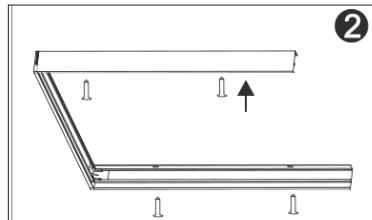

2. Fix the square frames into the ceiling with a Screw.

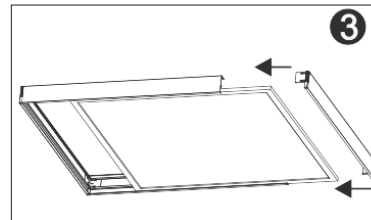

3. Insert the panel into frames and fix the cover plate frame

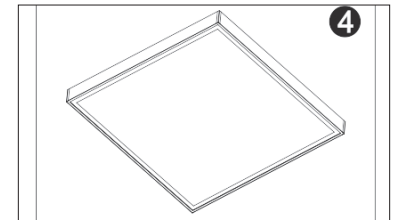

4. Finished the frame installation.